

# Setting up your Chair

#### a. Seat Height:

Ideally, your hips should be slightly higher than your knees to promote good posture. When your shoulders are relaxed and elbows are at right angles your forearms should be just above the surface of the desktop, parallel to the floor.

#### b. Seat Depth:

Your bottom should be at the back of the seat with roughly three fingers gap between the front of the seat and behind your knees. This will ensure adequate thigh support but without obstructing leg movement and lower leg circulation.

#### c. Back Height:

The lumbar support of the backrest should fit into the small of your back to maintain the natural 'S' shape of the spine.


© Ergochair Ltd 2014

#### Armrests:

The armrests should touch the underside of your forearms when your shoulders are relaxed and elbows are at right angles. This will avoid strain in the neck, shoulders and upper limbs.

#### Tension:

Create a feeling of floating (when your feet are off the floor) to encourage improved blood circulation and comfortable changes of posture. The tension should be not too soft so that you instantly recline and not too hard that you can't naturally push

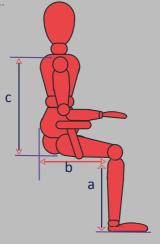

## 1. Seat Height Adjustment

Lift handle (1) and raise or lower seat until desired height is found. Release handle to set height. To lower the seat, body weight must be applied to seat surface. Adjustments should be made when sitting in the chair.



### 2. Seat Depth Adjustment

Seat depth adjustment lever is located on the left-hand under side of the seat. Lift lever (2) to slide the seat to the desired depth. Release the lever to set



## 3. Backrest Angle Adjustment

To alter the angle of the backrest, lift the lever (3) and move the backrest to your desired

This is best done whilst sitting. Return lever to the downward position to lock in place



## 4. Back Height Adjustment

Lock the backrest in a vertical position. When seated, grasp the sides of the backrest and raise until comfortable. This is a 6position ratchet system. To re-position the back, lift fully to the top, lower to the bottom and raise to the desired height



## 5. Seat Tilt Adjustment

The seat is locked in position when paddle (5) is in the downward position, to unlock the seat tilt action. lift the paddle up. Leave unlocked for free float or, if preferred, lock when the desired seat angle is reached.



### 6. Body Weight Tension Adjustment

The body weight tension adjuster is located under the seat and operated by turning the wheel clockwise to increase the tension and anti-clockwise to reduce



## 7. Inflatable Lumbar Support

Adjust the level of lumbar support by depressing the inflation pump bulb (7), located under the seat at the rear. If necessary, reposition the backrest angle and height

To deflate the air-cell, press the valve button attached to the bulb



## 8. Head/Neck Support (if fitted)

Height Adjustment - Raise or lower by grasping the headrest mechanism. Lift up or push down to achieve desired

Angle - Rotate the pad manually to achieve the angle you need.



#### Need some assistance?

Give us a call on: 01454 329210





# Care & Maintenance - Warranty

#### Care of cloth upholstery:

To maintain the cloth upholstery, regular vacuum cleaning is recommended. Marks and stains may be removed with a proprietary cleaner. In difficult cases, consult a reputable firm of cleaners, or ourselves for advice.

#### • Care of leather upholstery:

Leather upholstery should be wiped with a slightly damp cloth and gently rubbed dry. A good proprietary hide food should be applied at least once a year, and more often if the leather is in a dry atmosphere or close to a heat source.

### • Care of plastic parts:

Plastic compound parts are best cleaned by wiping with a slightly damp cloth and gently rubbing dry with a soft duster.

This product includes a comprehensive warranty.

Details of this warranty are available from Ergochair customer

services department on: 01454 329210

Should you have an issue with your chair, please contact us on the number above.



- 01454 329266
- sales@ergochair.co.uk
- www.ergochair.co.uk